

## RECORD NEW CODES

<b>C</b>	_____

LOCKWOOD SECURITY PRODUCTS PTY. LTD.  
A.C.N 086 451 907  
50 Edward Street, Oakleigh  
Victoria 3166, Australia

Lockwood Guarantee: Please refer to the Lockwood catalogue concerning the Lockwood Security Products Pty Ltd Guarantee.  
Note: Under no circumstances should the 4 only 'tamper proof' screws be removed as this will result in the Guarantee to become null and void.



# DX DIGITAL LOCK

## OPERATING INSTRUCTIONS

Press button 'C' to clear lock mechanism.  
Enter code and rotate turn knob to unlock.

CODE CHANGING INSTRUCTIONS INSIDE

## RECORD NEW CODES

<b>C</b>	_____

## SETTING A NEW CODE

### READ INSTRUCTIONS CAREFULLY BEFORE RE-CODING:

If necessary the factory set five digit code can be easily changed to a new four, five or six digit code of your choice.

### STEP 1:

#### SELECT YOUR NEW CODE:

Use any combination of numbers or letters (0 to 9 XYZ) as a four, five or six digit code.

EACH DIGIT CAN ONLY BE USED ONCE IN A CODE.

NOTE: BUTTON 'C' is used for clearing the code selector mechanism and CANNOT BE CHANGED.

#### EXAMPLES OF CODES


FOUR DIGIT CODE - C [2347]  
FIVE DIGIT CODE - C [897YZ]  
SIX DIGIT CODE - C [01349X]

### STEP 2:

#### PREPARE LOCK FOR RE-CODING:

#### KEEP LOCK HORIZONTAL WHILE CHANGING CODE

- Remove adaptor plate.
- Remove four red screws and carefully remove backplate.

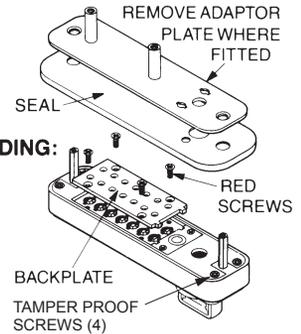

### STEP 3:

#### SETTING YOUR NEW CODE:

- Hold button 'C' depressed on front face while repositioning tumblers.

- Using tweezers supplied, reposition RED and BLUE tumblers as follows:

RED TUMBLERS are located in holes corresponding to new code. Insert one red tumbler for each digit in the code. e.g. a four digit code requires four red tumblers. (Where necessary use spare tumblers from plastic wallet.) BLUE TUMBLERS are located in all remaining holes.

INSERT TUMBLERS WITH COLOURED END UP AND LARGE SQUARE CUT-OUT FACING SIDE OF LOCK. (SEE FIG. 3b)

EVERY HOLE MUST HAVE A TUMBLER FOR THE LOCK TO FUNCTION.

- Release button 'C' after repositioning tumblers.


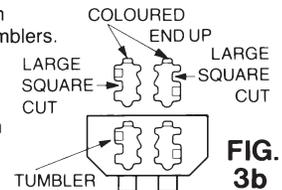


FIG. 3b

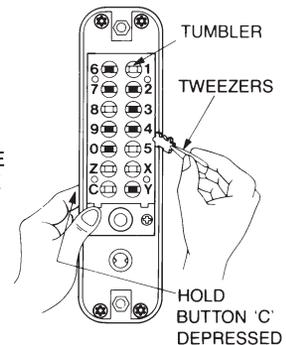

### STEP 4:

 
#### TO RE-ASSEMBLE:

Replace backplate carefully and secure with four red screws.

CHECK THAT LOCK FUNCTIONS CORRECTLY USING NEW CODE BEFORE INSTALLING ON DOOR - REFER TO OPERATING INSTRUCTIONS ON FRONT OF THIS CARD.

RECORD YOUR NEW CODE IN SPACE PROVIDED ON THIS CARD.

RETAIN TWEEZERS, SPARE TUMBLERS AND INSTRUCTIONS FOR FUTURE CODE CHANGES.



CODED EXAMPLE - C897YZ