

Securicraft®



Windowbolt
the concealed
locking bolt

- ✓ Key operated security
- ✓ Hidden security for windows

Suitable
for these
windows:



AWNING



CASEMENT

✓ Timber

MC14


Windowbolt

- ✔ Shoots bolt into window frame
- ✔ Robust construction
- ✔ Resists attack

Components:

- 1 x Bolt assembly
- 1 x Key
- 1 x Strikeplate
- 1 x Escutcheon plate
- 6 x Screws

Tools required:

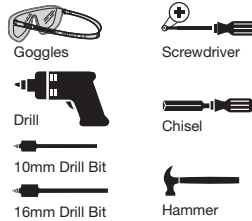

The warranty covers manufacturing defects, standard finishes but excludes plated finishes or finishes exposed to a corrosive environment. The warranty excludes damage caused by installation contrary to written instructions and incidental or consequential damage. We recommend regular cleaning with mild detergent.

Fixing Instructions

1 Fitting bolt

Select position for Windowbolt. Mark centre of window edge at point where bolt is to be fitted. Drill a 16mm diameter hole to a depth of 45mm. With bolt in hole mark around forend plate and recess to correct depth.


2 Locating keyhole

Mark position of keyhole on inside face, 23mm from edge of window on the centreline and drill 10mm diameter hole to required depth. Secure bolt in position. Fit key escutcheon plate in place and test for correct operation.


3 Fitting strike plate

Close window and turn bolt with key to mark centre of bolt on window frame. Drill 16mm diameter hole in frame to a depth of 14mm. Recess strike plate and screw in place. Test for correct operation.


Fixing Instructions



Large awning window



Small awning window



Side hung window

ASSA ABLOY New Zealand Limited
6 Armstrong Road, Albany
North Shore City 0632, New Zealand
www.assaabloyasiapacific.com



077 058 April 09-2

An ASSA ABLOY Group brand

ASSA ABLOY

MC14PB



9 414553 200212