


Auckland 09 276 0800
Waikato/BOP 07 928 0800

Wellington 04 473 9994
Christchurch 03 348 6158


INSTALLATION INSTRUCTIONS STEPS 1-3 (for both Privacy Handle and Passage Handle)

NON LOCKING

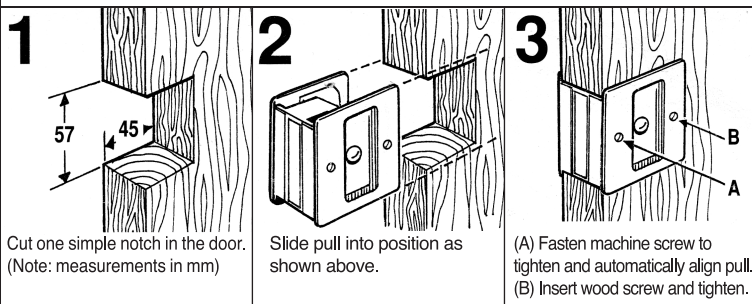


INSTALLATION INSTRUCTIONS STEPS 4-7 (Privacy Handle for bathroom or bedroom doors)

LOCKING ONLY

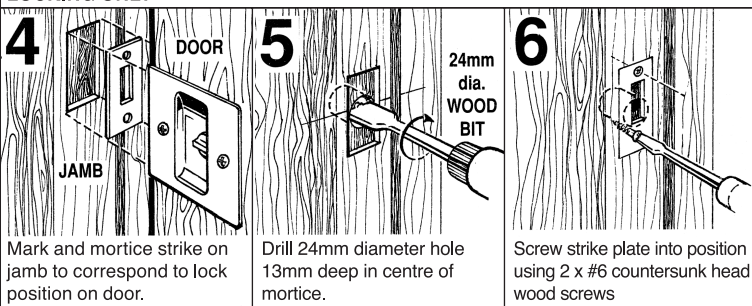

7 TO ASSEMBLE AFTER REVERSING PLATES
Make sure fork arm engages rocker pin when reversing plates

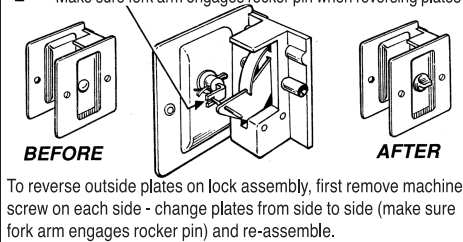



 **CL332**

FOR DOORS
33 to 36mm THICK

 **CaviLock™**

Handles & locks for sliding doors

PASSAGE HANDLE

For Cavity Sliding Doors





 **CL333**

FOR DOORS
33 to 36mm THICK

 **CaviLock™**

Handles & locks for sliding doors

PRIVACY HANDLE

For Cavity Sliding Doors

